

Thank you for purchasing our 3-D Molded Dash/Trim Kit.

Any reputable automotive re-styler or interior shop will be able to install this system for you.


If you elect to Do-It-Yourself, please carefully follow the instructions below and take all necessary precautions to insure a proper installation.

If technical assistance is required, please call our staff at (310) 863-0863.



High Quality "Automotive Laminates":

- English Burlwood Finish

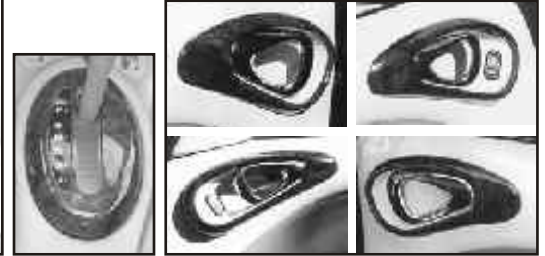

Installation Instructions for 2001 PT Cruiser 3-D Molded Interior Trim

TOOLS REQUIRED:

- Isopropyl Alcohol Swab (supplied in kit)
- Soft Lint-free Towel
- Standard Utility Knife (or fingernails)
- Water or household Window Cleaner

BEFORE YOU START: READ THESE INSTRUCTIONS THROUGH COMPLETELY!

Interior vehicle temperature should be minimum 72°F.

Make sure to read instructions carefully **and install the smallest pieces first**, to familiarize yourself with the process.

STEP 1. SURFACE CLEANING & PREPARATION (3-D Molded Trim Kit)

- Clean the specific dash areas that are to be covered by the trim thoroughly with Isopropyl Alcohol, (supplied with kit.)
- The surface area should be free of lint or dirt, and more specifically silicone based "Vinyl Treatment Products". These products leave a silicone residue that will greatly reduce adhesion.

Caution!!! Vehicles that have been treated with Vinyl Treatments need to be thoroughly cleaned until the surface area is dull in appearance, and there is no feel of residue to the touch of your fingers.

- Special care should be taken on any used vehicle. The surface can be tested with a piece of masking tape in order to see if it will adhere.

STEP 2. TEST FITTING THE DASH TRIM (3-D Molded Trim Kit)

- Before removing the tape backing, test fit each component in order to get comfortable with your placement, ensuring that buttons and vents move freely.

STEP 3. INSTALLATION TO THE DASH (3-D Molded Trim Kit)

- With a Standard Utility Knife catch the corner of the Red Liner on the 3M tape and remove on all pieces.
- After installing the trim do not handle for a period of 72 hours.

STEP 4. FINISHING TOUCHES (3-D Molded Trim Kit)

- Once you are comfortable with placement, apply the overlay straight and even, not right to left, or left to right. Press down, applying gentle to moderate pressure until the part is in place. Once the product is in place, inspect all areas for adhesion and gently press down on any areas required.

CARE AND CLEANING (3-D Molded Trim Kit)

Now that you have successfully installed your 3-D Molded Trim kit, keep it looking like new by following these simple care instructions.

- Clean using a dirt free towel polish dash using water, or standard household Window Cleaner.
- **Avoid using any "Vinyl Treatment" products on these molded trim pieces.**

LIMITED LIFETIME WARRANTY — PT-Tuning warrants these products to be free from defective workmanship or materials under normal use and service for the life of the vehicle with the original owner in which the products are installed. This warranty does not cover products that have been altered, installed or handled improperly. Our obligation under this warranty shall be limited to repairing or replacing any parts that are defective.

**Go to www.pt-tuning.com for complete Limited Lifetime Warranty details,
or call 310-863-0863 to arrange for warranty service or exchange.**

We recommend that installation of these molded trim kits be done by a trained automotive restyling or interior trim specialist. If these parts are to be installed by a do-it-yourself person, or end user, then Bauhaus Corporation and/or PT-Tuning cannot be responsible for mis-installation of these parts.

©2000-2003 Bauhaus Corporation — All Rights Reserved